

AHD DUAL CAMERA

User Manual



1.Main Parts & Accessories



Main Part
(1pcs)



"L"hexagon wrench
(1pcs)




Sticker
(2pcs)



User Manual
(1pcs)

2.Size

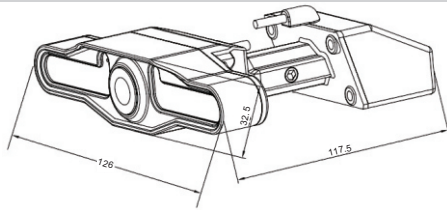

Operation procedures:





1



2

1. Stick the camera directly via sticker.
2. Stick separately if there has windscreen on the car.
3. Adjust angle via spanner .

Product info:

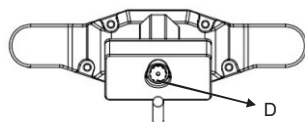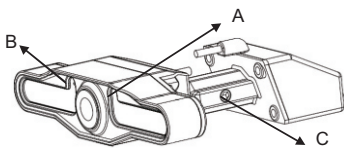


- A: Photoresistor (IR ON when it's dark).
B: Microphone hole(audio)
C: Screw of Adjust angle
D: CMOS lens(Front road view)

3.Notes

- (1) Make sure the power is off before installation.
- (2) Check and confirm the availability of right power supply. Wrong voltage will inflict damage to component(s) in camera.
- (3) Do not use camera in overheated and humid environment. Keep a good ventilation so as to reduce fire and outrage.
- (4) Only the professional technicians are entitled for installation and repair. By no means, this camera shall not be repaired or dismantled on customer's own. Manufacturer holds no responsibility in case of unauthorized repair, and use of uncertified spare parts.

Attention: the base or bracket shall have the strength to hold weight that amount to three cameras in all.

4.Connection Diagram

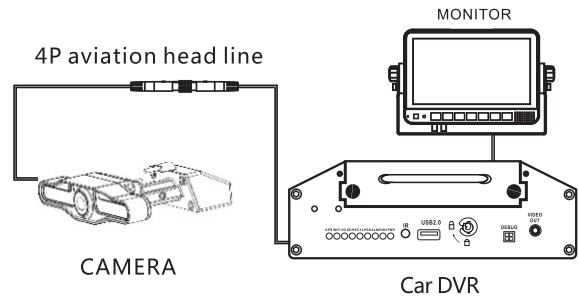

Technical Parameters	
Image sensor	1/3" CMOS
Horizontal resolution	1.3Megapixel
TV system	PAL/NTSC
Effective pixel	1280(H)*960(V)
Minimum illumination	Color 0.1Lux @ (AGC ON),0 Lux with IR
S/N ratio	=44dB
Day/Night mode	Double filter switcher (IR-CUT)
Backlight compensation	AUTO
White balance	AUTO
Electronic shutter	AUTO/1/50 (1/60) -1 (50, 000Sec)
Video output	Meet AHD standards
Audio input	Built-in Mic
Audio output	standard
Lens	Front: 2.8mm; Rear: 2.1mm
Horizontal viewing angle	Front: 88 degree; Rear: 120 degree
IR leds Qty	10 pcs LEDs
IR distance	=5 meters
Operating temp	-20°C~+70°C
Power supply	DC12V±10%
Power consumption	=5W

*Specifications are subject to change without prior notice.