

 
Megapixel AHD Car Camera

User Manual



Before you use this product, please read the introduction

1. Main Parts & Accessories



Main Part
(1PCS)



Assorted screw
(2pcs)




"L"hexagon wrench
(1pcs)




User Manual
(1pcs)

2. Connection Diagram

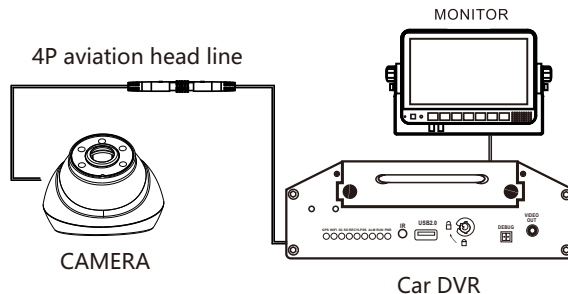


3. 4P Aviation Plug Connector

 Video Output: Aviation Plug Connector



Aviation RS765-4 (Female)
1---12VDC(+) 3---AUDIO
2---12GND(-) 4---VIDEO

4. Size

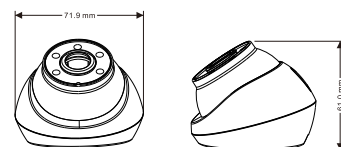

5. Notes

- (1) Make sure the power is off before installation.
- (2) Check and confirm the availability of right power supply. Wrong voltage will inflict damage to component(s) in camera.
- (3) Do not use camera in overheated and humid environment. Keep a good ventilation so as to reduce fire and outage.
- (4) Only the professional technicians are entitled for installation and repair. By no means, this camera shall not be repaired or dismantled on customer's own. Manufacturer holds no responsibility in case of unauthorized repair, and use of uncertified spare parts.
- (5) If abnormal conditions are found, please turn off the power supply and contact the local dealers in time.

Image sensor	1/2.9" CMOS
Horizontal resolution	2.0Megapixel
TV system	PAL/NTSC
Effective pixel	1920(H)*1080(V)
Minimum illumination	Color 0.05Lux, 0 Lux with IR
S/N ratio	≥56dB
Day/Night mode	Color to Blackwhite switch automatically
Sync system	Internal
Backlight compensation	AUTO
White balance	AUTO
Electronic shutter	AUTO/1/50 (1/60) -1 (50, 000Sec)
Video output	AHD Standard, 1080P output
Audio input	Built-in Mic (Optional features)
Audio output	1 Channel audio output
Lens	1.98mm
Viewing angle	D=175, H=145, V=80
IR leds Qty	4pcs LEDs
IR distance	≤10 meters
Waterproof grade	IP69K
Operating temp	-30°C~ + 80°C
Power supply	DC12V±10%
Power consumption	≤2.5W

The contents of this manual are for reference only